

504P0390
(1/2)

1/5

FIG.1

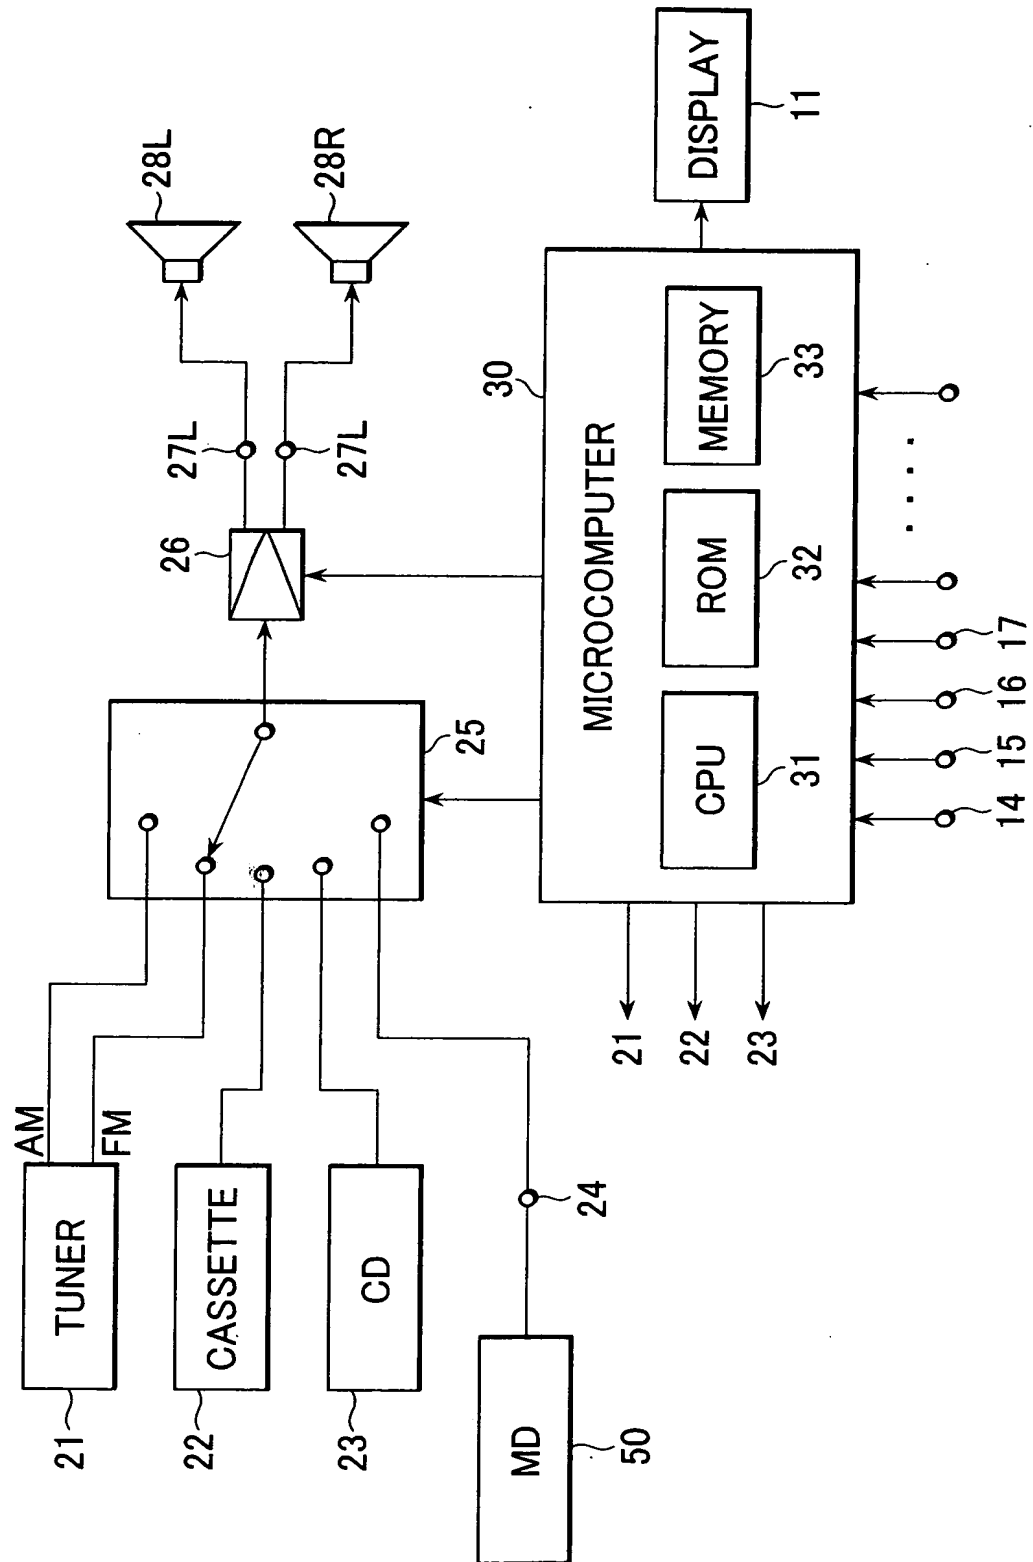


FIG.2

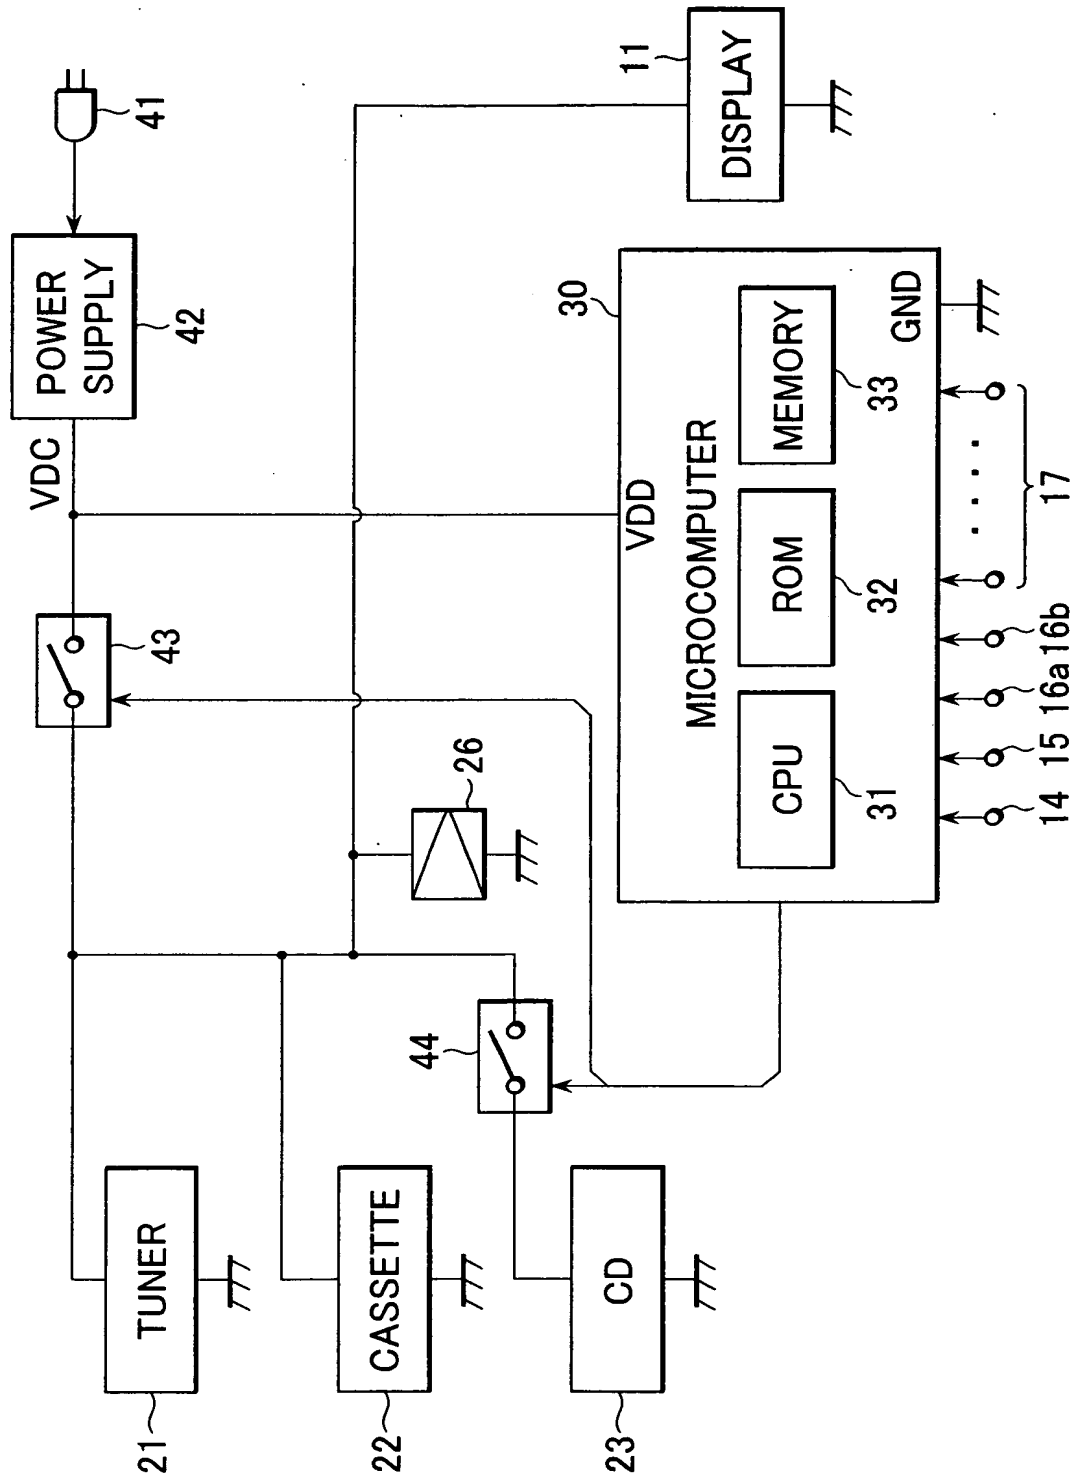


FIG.3

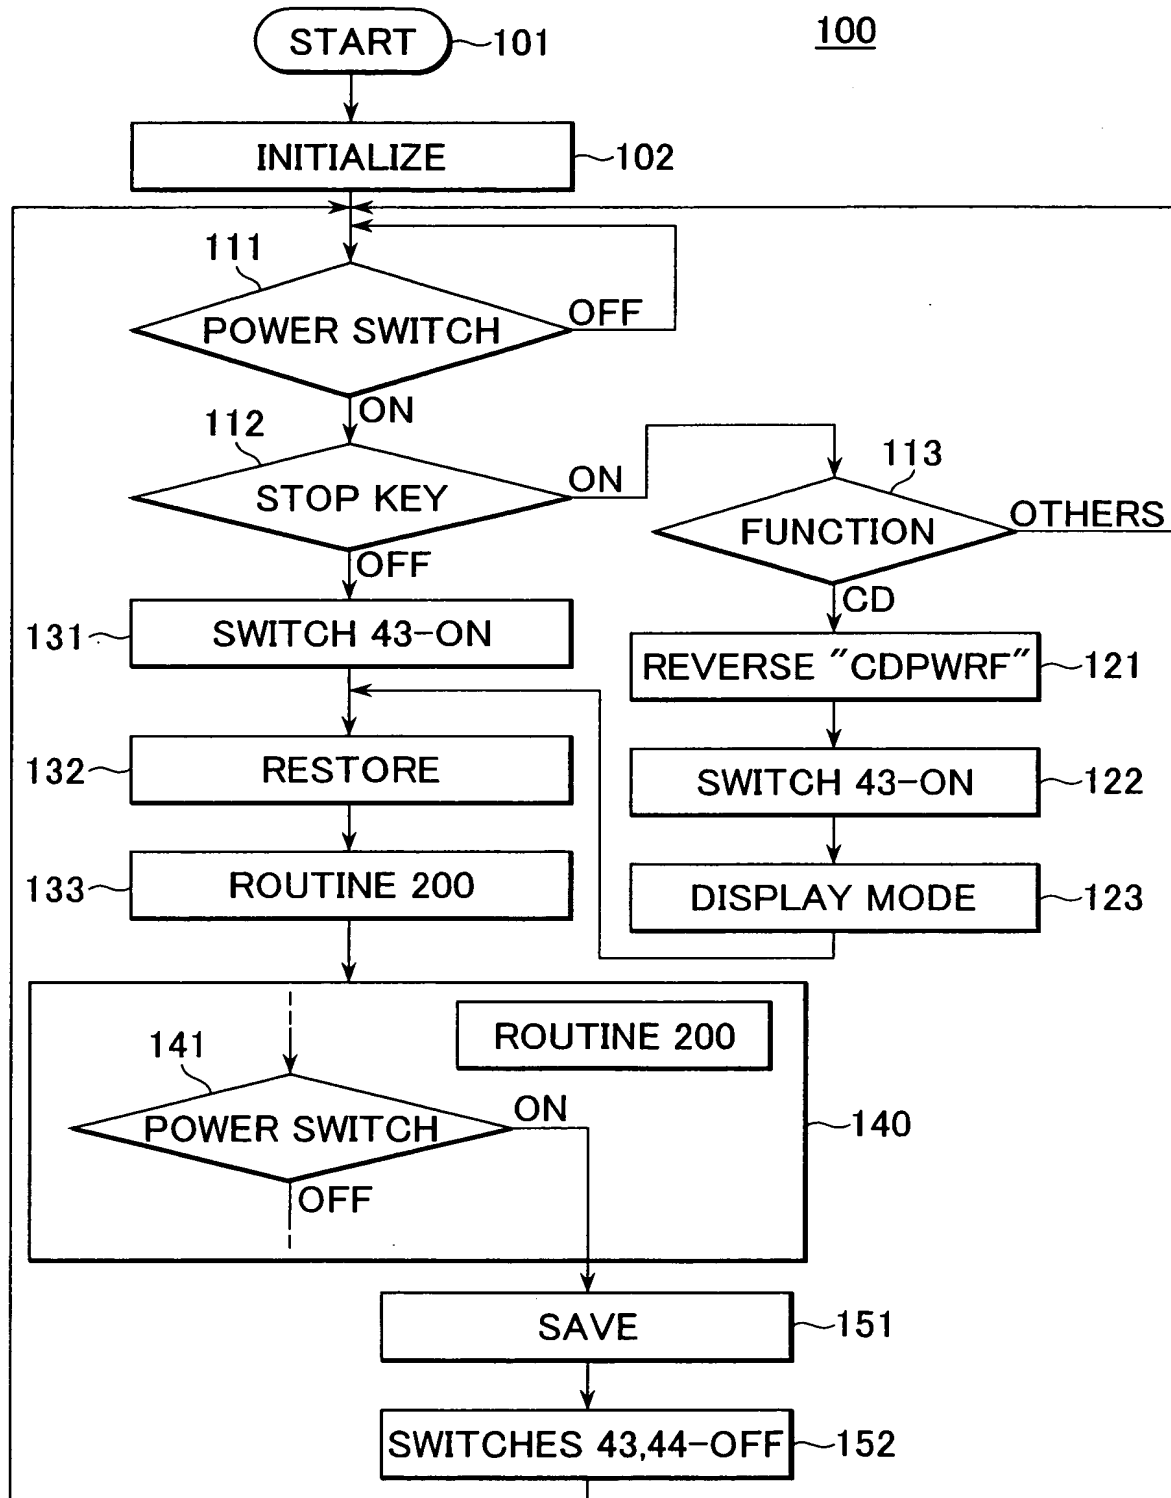


FIG.4

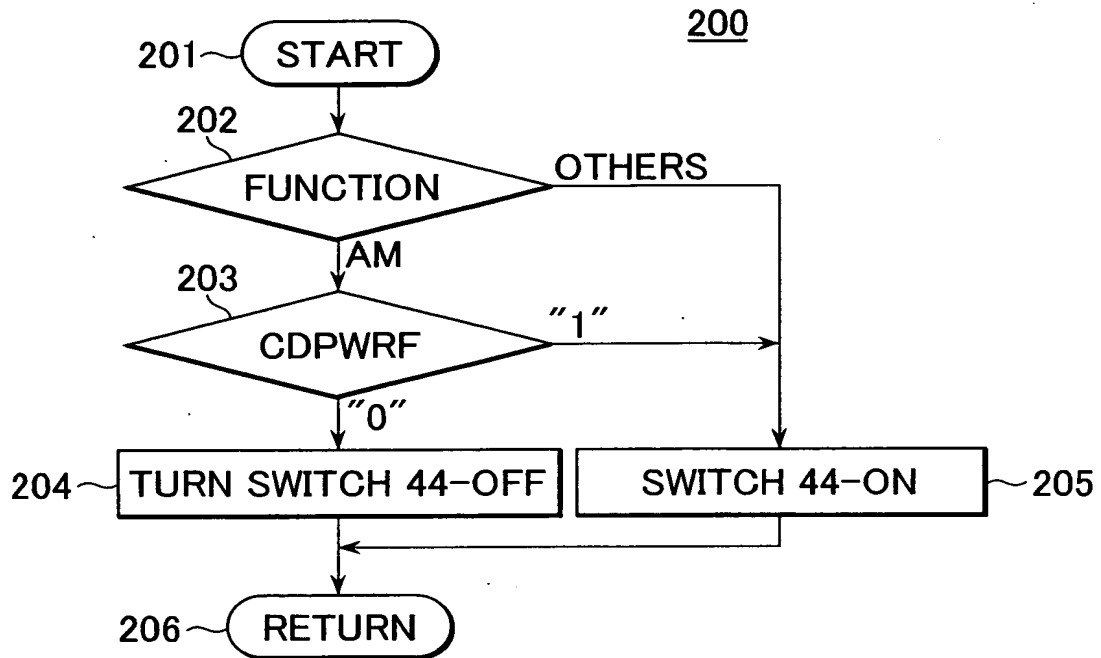


FIG.5

FUNCTION FLAG CDPWRF	BROADCAST RECEIVING	CD/CASSETTE/ LINE INPUTS (MD)
"1"	ON	ON
"0"	OFF	ON

POWER CONTROL OF CD PLAYER

FIG. 6

